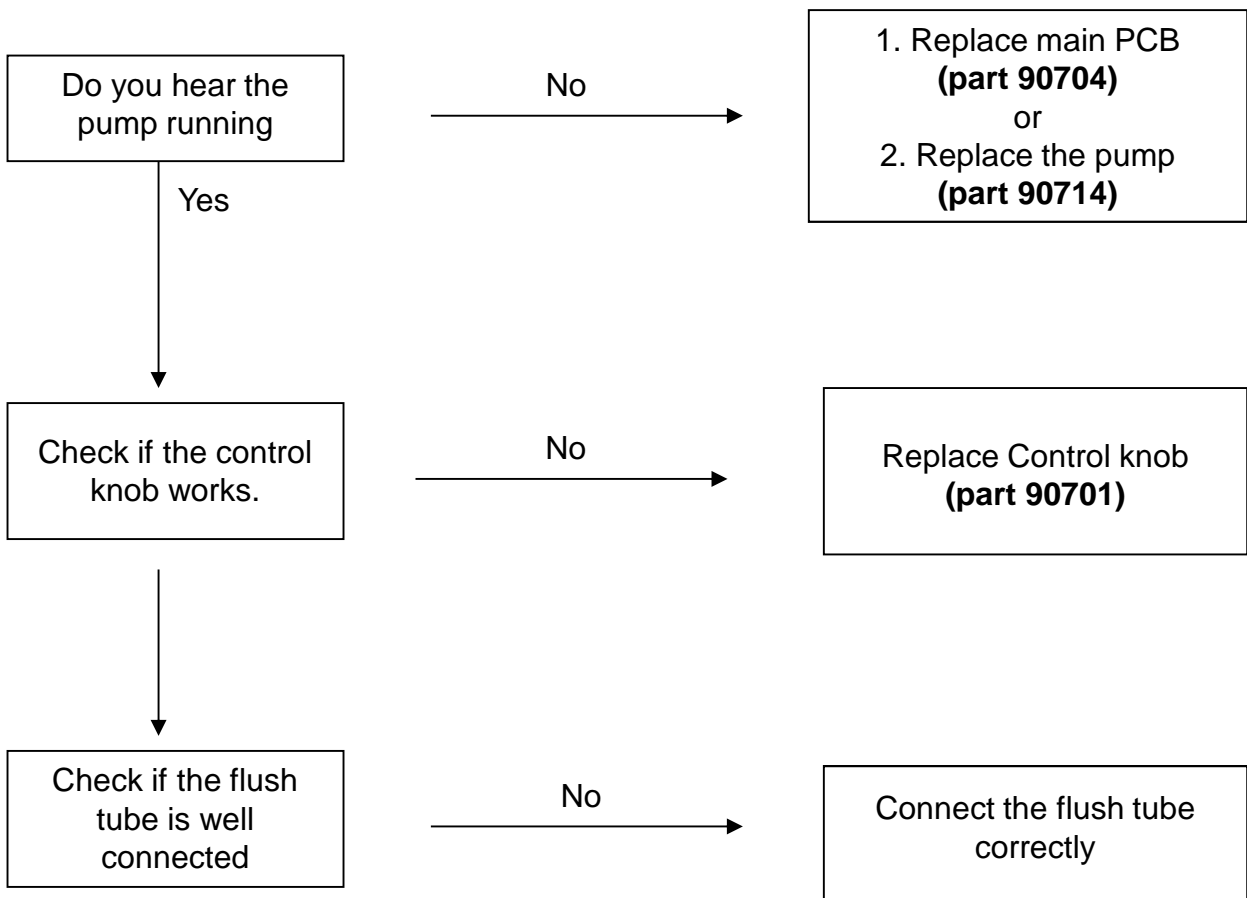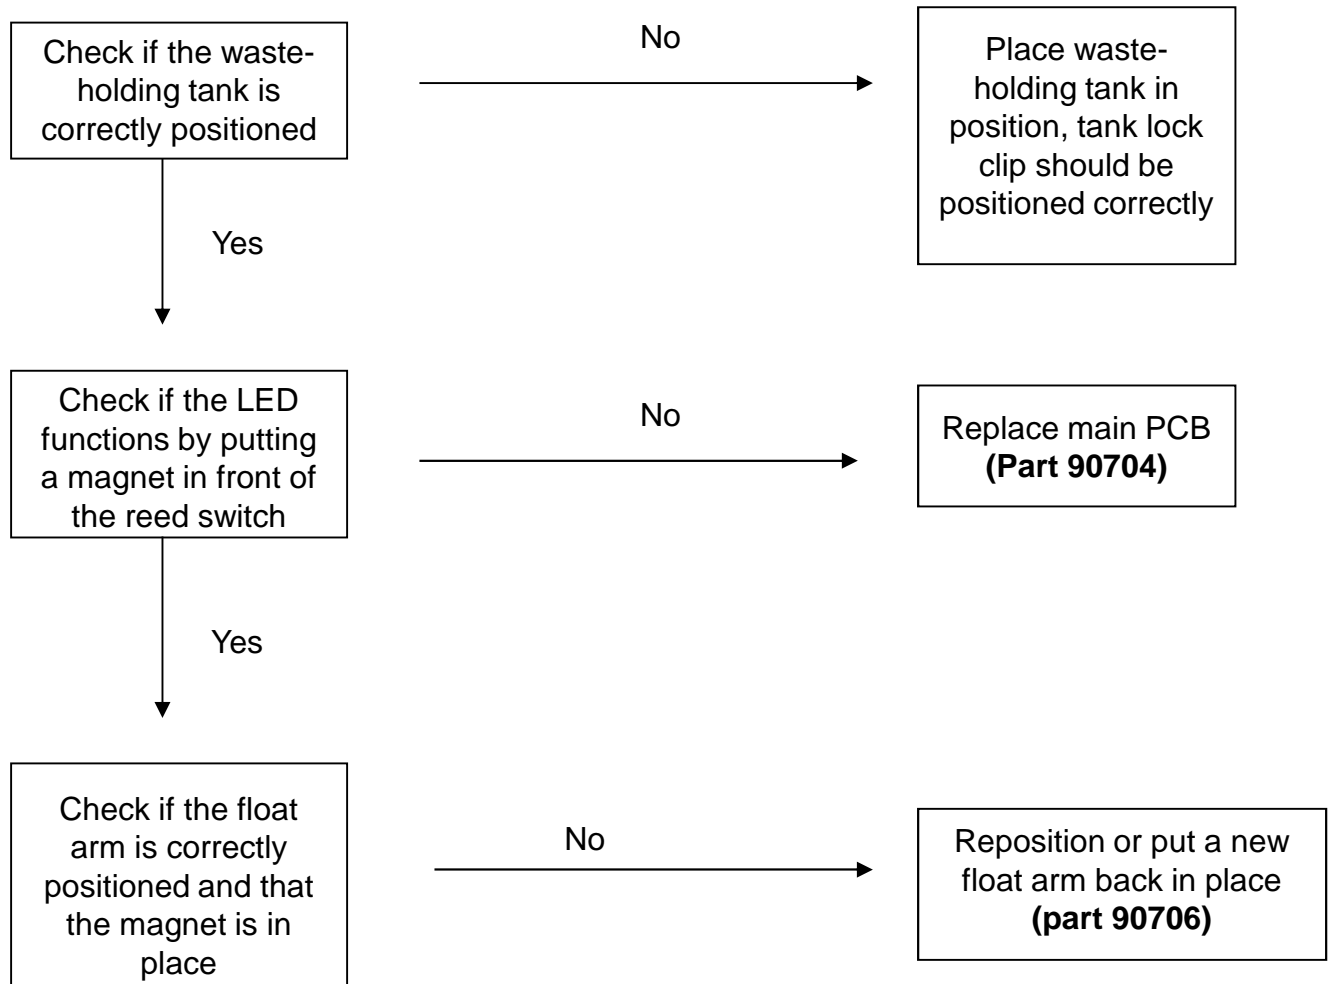# THETFORD

No flush C500C

☝ **Before starting, ensure that the toilet is connected properly by checking the 12v diagram. Also ensure that the fresh water tank is full.**

| Do you hear the pump running | →No→ | 1. Replace main PCB **(part 90704)** or 2. Replace the pump **(part 90714)** |

Yes ↓

| Check if the control knob works. | →No→ | Replace Control knob **(part 90701)** |

↓

| Check if the flush tube is well connected | →No→ | Connect the flush tube correctly |

THETFORD

No level indication of the C500 Waste-Holding Tank

Check if the waste-holding tank is correctly positioned	→ No →	Place waste-holding tank in position, tank lock clip should be positioned correctly

Yes ↓

Check if the LED functions by putting a magnet in front of the reed switch	→ No →	Replace main PCB **(Part 90704)**

Yes ↓

Check if the float arm is correctly positioned and that the magnet is in place	→ No →	Reposition or put a new float arm back in place **(part 90706)**

Leakages

➢ **Leakage between the bowl and the Waste-Holding tank**

| Check if the waste-holding tank is correctly positioned | → No → | Place waste-holding tank in position, tank lock clip should be positioned correctly |

↓ Yes

| Check if the Lipseal is ok | → No → | Replace the Lipseal **(part 23721)** |

↓ Yes

| Contact Thetford Customer Service |
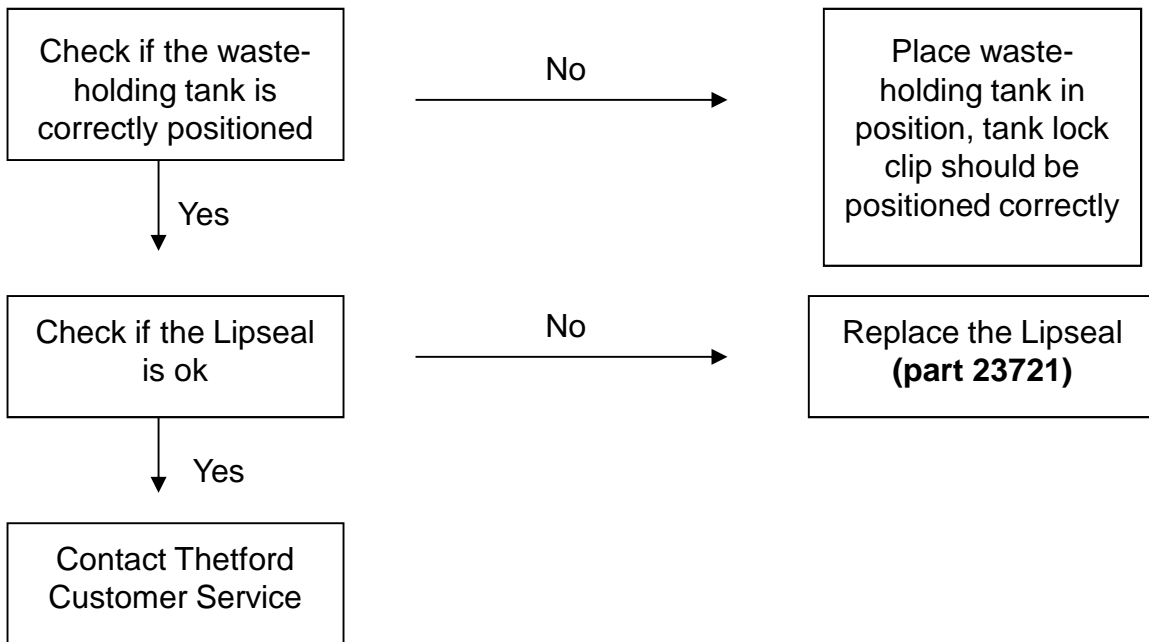
➢ **Leakage at the Water tank**

| Check if the drain tubes leaks | → Yes → | Replace the drain tube **(part 90703)** |

↓ No

| Contact Thetford Customer Service |

| Leakage between toilet bowl and waste-holding tank | → Yes → | Contact Thetford Customer Service |

06/15

THETFORD
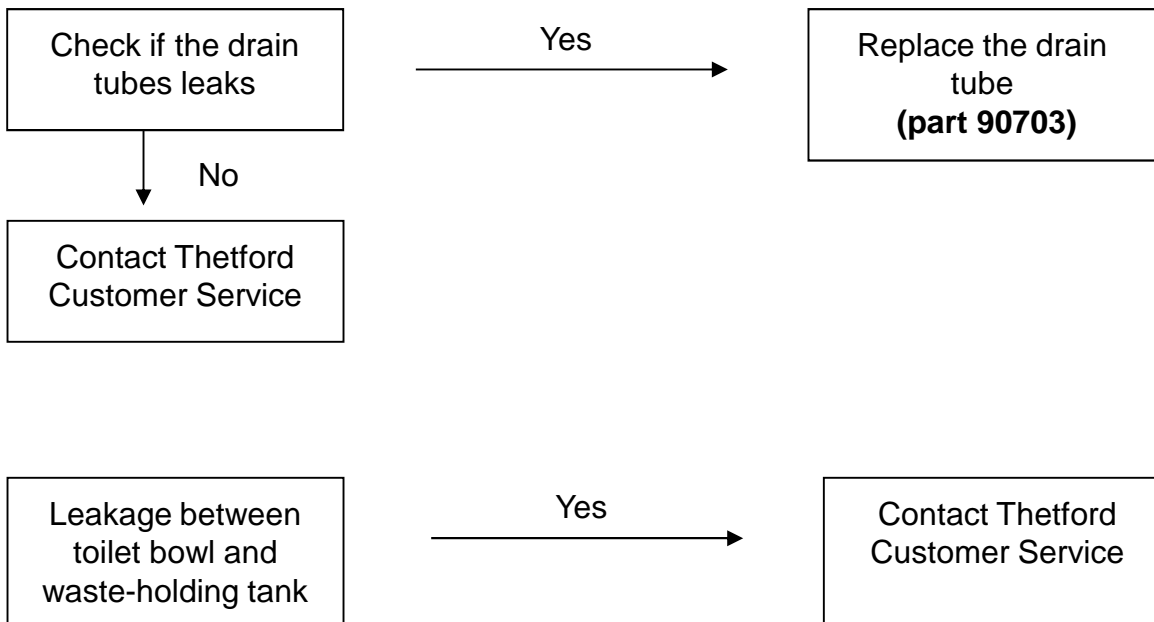
> **Leakage at the Waste-Holding tank**

   - **Leakage at the vent button**

Replace the vent button **(part 3230716)**

   - **Leakage at the pour out spout**

Replace the pour out spout **(part 3230606)**

   - **Leakage at the automatic vent**

Is there dirt on the inside from automatic vent e.g. toilet paper	Yes →	Clean the automatic vent

   No ↓

Replace the automatic vent **(23722-06)**